EW11 Ends for GWR Super Saloons, Centenary Corridor Third and Corridor Brake Composite

Assembly instructions

1. Solder an M2 nut (supplied if this pack is bought as a component in a complete coach kit) over the hole in the inner face of the floor.


2. Solder the droplights in place, taking care to avoid getting any solder in the half-etched fold lines.


3. Bend up the floor, sides and side fillets as shown. Solder the edges of the floor to the bottom of the door sections using the half-etched line on the inside as a guide.

4. Fit the slots in the false roof over the tabs at the top of the doors. Push the false roof as far as possible to the outer face of the end and solder in place.

5. File back the tabs and any excess solder flush with the top of the roof. Clean any excess solder from the underside of the floor at the joint with the bottom of the doors.

6. The ends can now be bolted temporarily to the floor pan (if building a complete kit) and assembled to the sides as described in the sides pack.

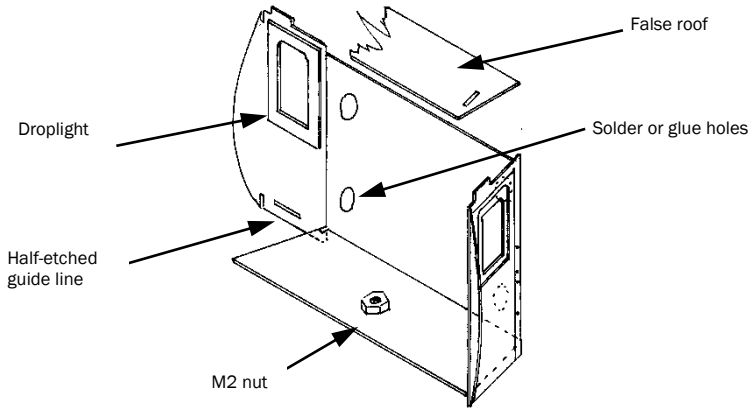

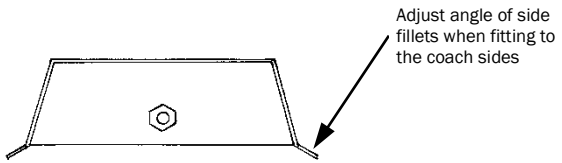

Comet Models is part of Wizard Models Limited, PO Box 70, Barton upon Humber DN18 5XY
Tel 01652 635885, web www.wizardmodels.ltd, e-mail info@wizardmodels.ltd

© Wizard Models Limited 2025